




# Parts and Accessories Installation Instructions

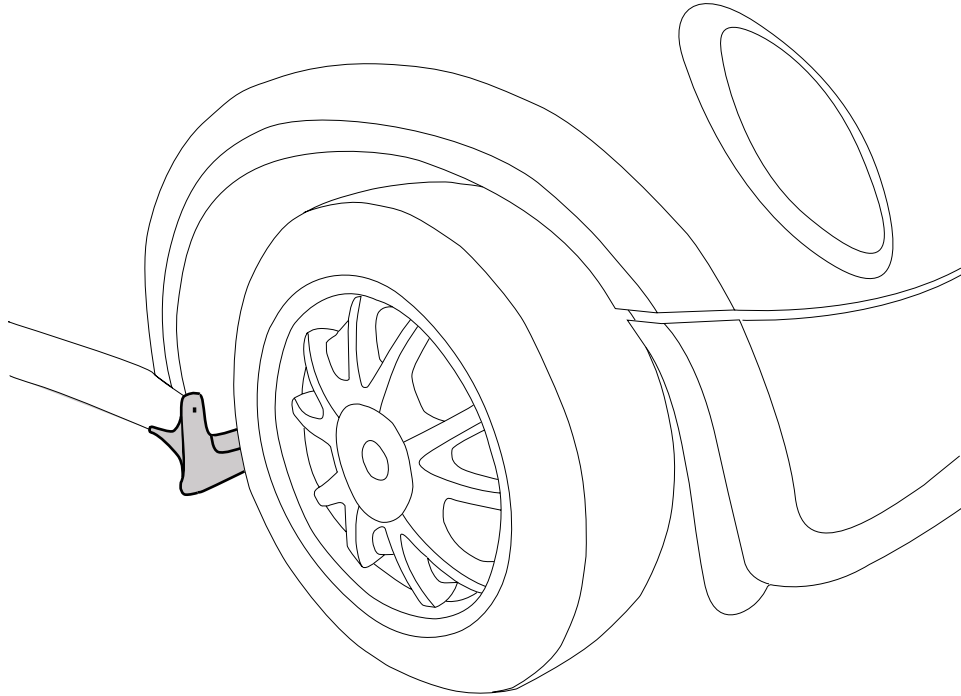

050 0159 V

---

## Front Mud Flaps MINI (R 50)

The installation time is approx. 0.5 hours, but this may vary depending on the condition of the car and the equipment in it.

Retrofit / Installation kit No. 82 16 0 136 806

# Assembly

